

INSTRUCTIONS

Horizontal Pop-Up Banner



Includes:
Pop-up banner
Carrying bag
4 ground spikes



1

Unzip the carrying bag and remove the Pop-Up Banner.



2

Slowly unfold the Banner so that both sides are fully visible.



3

Separate each side of the Banner and Velcro the two strips along the base as well as the two strips along the sides.



4

If you would like to secure the Pop-Up Banner to the ground, use the four ground spikes provided (additional tools may be needed for this).



This product is for outdoor promotional use only and should not be left out in extreme weather conditions. Please use common sense guidelines and do not display this product outdoors when extreme winds or storms may be present.

INSTRUCTIONS

Horizontal Pop-Up Banner (disassembly)



1


Detach the two Velcro strips along the base as well as the two strips along the sides.



2

Flatten the Banner and turn it upside down in preparation for folding.

Note: Using your foot to prop up the Banner can be helpful.

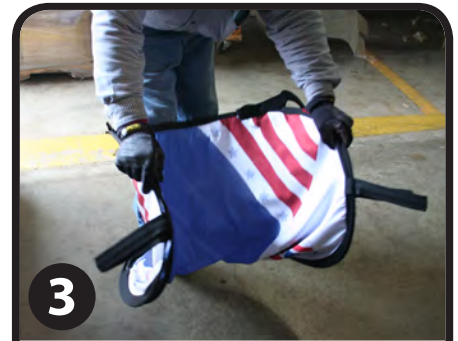

3

Begin to fold the outside edges inward, using your wrists to gradually fold the top towards the ground.



4

Continue to fold the top towards the ground, making sure that the top ridge of the Banner is within the lip of the bottom ridge.



5

Fold each side inwards and the Banner should fold into three circular sections.

