
INSTRUCTIONS

Standard Cross Base

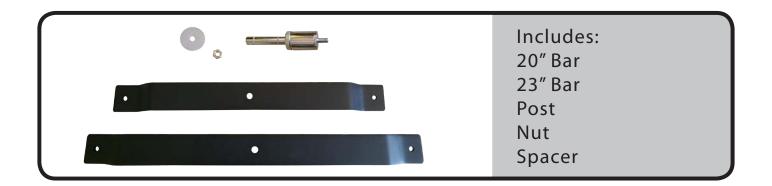



Place 20" bar on a surface with feet facing downwards. Place spacer on top, aligning spacer hole with center hole of the bar.



holes.

